

BUSH

BUSH

Instruction Manual

NE-8152

Contact:
www.argos-support.co.uk
Helpline: 0345 257 7271



You'll soon be enjoying your new All-in-one Micro System.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your All-in-one Micro System. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 257 7271.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your All-in-one Micro System

Ready? Let's begin	10
Product Overview	10
Connecting to the Mains Supply	12
Battery Replacement for the Remote Control	12
Remote Control Operation Range	13
General Operation	13

3 Using your All-in-one Micro System

DAB Operation	18
FM Operation	20
CD/MP3 Operation	22
Bluetooth® Operation	24
USB Operation	25
AUX Operation	25
Maintenance	26

4 Other information

Specifications	29
----------------	----


5 Product support

Troubleshooting	32
Help and assistance	34
Disposal	35
Guarantee	36

section of these instructions, or online at www.argos-support.co.uk if you still require further assistance, call one of our experts on 0345 257 7271.

BUSH 3

 Safety information 1

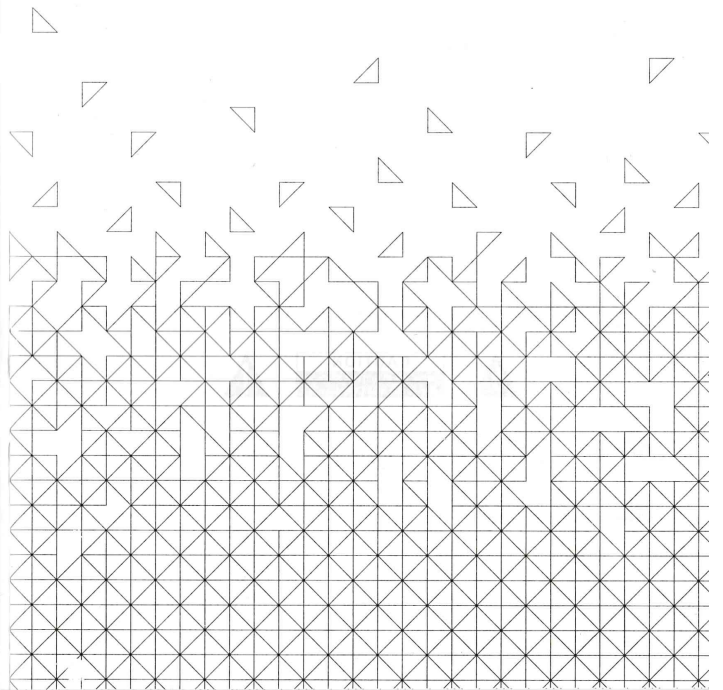



Safety information

Important - Please read these instructions fully before installing or operating

Safety Precautions

- Read all the instructions carefully before using the unit and keep them for future reference.
- Check that the voltage marked on the rating label matches your mains voltage.
- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires. Avoid exposure to direct sunlight and other sources of heat.
- Never place any type of candle or naked flame on the top of or near the unit.
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.
- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another coned space, ensure that a minimum of 10cm should be kept around the apparatus for ventilation.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.



Safety information

Important - Please read these instructions fully before installing or operating

Mains Cable

- Make sure the unit is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted sound.

 
Supervision

- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Service/Maintenance

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.
- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

Getting to know your All-in-one Micro System 2

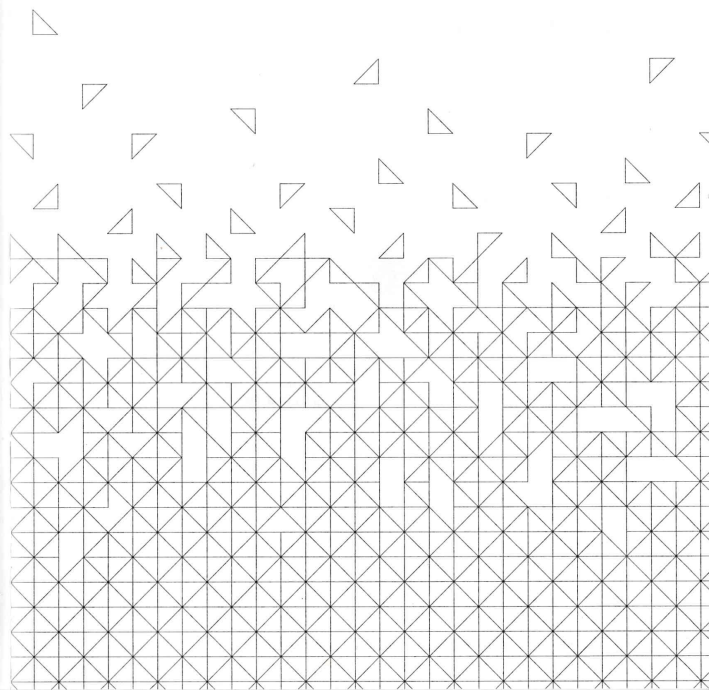

Getting to know your All-in-one Micro System

 
You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation. If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Product Overview

front view

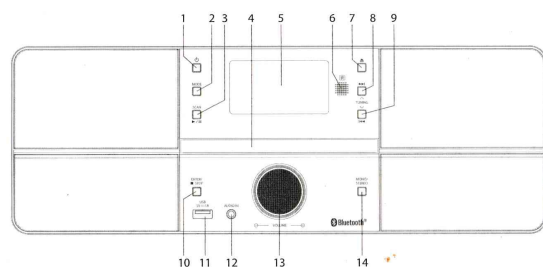


- | | |
|--|---|
| 1. STANDBY Button | 9. TUNING ∇ / \blacktriangleleft Button |
| 2. MODE Button | 10. ENTER / \blacksquare STOP Button |
| 3. SCAN / \blacktriangleright Button | 11. USB 5V \rightleftharpoons 1A Charging Port |
| 4. Disk Tray | 12. AUDIO IN Socket |
| 5. Display | 13. VOLUME \pm Dial |
| 6. Remote Control Sensor | 14. MONO/STEREO Button |
| 7. \blacktriangle Open/Close Disk Tray Button | |
| 8. TUNING \wedge / \blacktriangleright Button | |

Getting to know your All-in-one Micro System

You'll be up and running in no time

 rear view

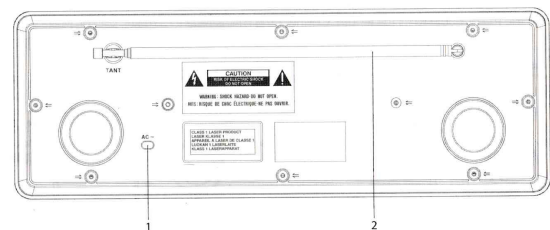


1. Mains Cable

2. FM Aerial

remote control

- | | |
|---|---|
| 1. ON/STANDBY ϕ Button | 21. INTRO Button |
| 2. Number Buttons | 22. RANDOM Button |
| 3. REPEAT Button | 23. MUTE Button |
| 4. EQ Button | 24. SLEEP Button |
| 5. MONO/ST. Button | 25. TUNING \wedge / \blacktriangleright Button |
| 6. TUNING ∇ / \blacktriangleleft Button | 26. VOLUME + Button |
| 7. PRESET \wedge Button | 27. ENTER Button |
| 8. VOLUME - Button | 28. FOLDER + Button |
| 9. PRESET ∇ Button | 29. AUDIO IN Button |
| 10. FOLDER - Button | 30. TUNER/DAB Button |
| 11. CD Button | 31. \blacktriangleright Button |
| 12. USB Button | (Bluetooth mode) |
| 13. BLUETOOTH Button | 32. \blacktriangleright Button |
| 14. \blacktriangleleft Button | (Bluetooth mode) |
| (Bluetooth mode) | 33. \blacktriangleright Button |
| 15. Display Button | (CD/USB mode) |
| (CD/USB mode) | 34. STOP \blacksquare Button |
| 16. SCAN Button (DAB mode) | (CD/USB mode) |
| 17. \blacktriangle Open/Close Disk Tray Button | 35. Display Button |
| 18. MEMORY Button | (DAB mode) |
| 19. CLOCK Button | 36. MENU Button (DAB mode) |
| 20. TIMER Button | 37. Display Button (FM mode) |
| | 38. SCAN Button (FM mode) |

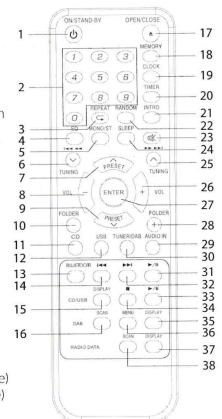 


Getting to know your All-in-one Micro System

You'll be up and running in no time

Connecting to the Mains Supply

 
This unit is designed to operate with an AC power supply. Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket. The unit is now connected and ready to use.

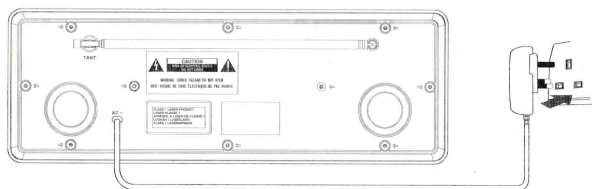

⚠ Connecting the unit to any other power source may cause damage to the unit.

Battery Replacement for the Remote Control

 1. Open the battery cover.
2. Insert the R6/AA/UM3, 1.5V battery (not included). Make sure to match the (+) and (-) ends of the battery with the (+) and (-) ends indicated in the battery compartment.
3. Close the cover.



⚠ Handling the Battery

 
1. Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
2. Only use the battery type indicated in this manual.
3. Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.
4. Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.

Getting to know your All-in-one Micro System

You'll be up and running in no time

Remote Control Operation Range

The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 4 metres away and within a maximum of 60° arc. Please note that the operating distance may vary depending on the brightness of the room.

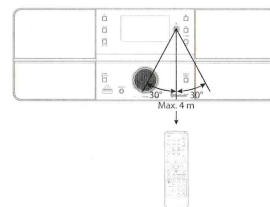

General Operation

powering ON/OFF

- when you first connect the unit to the mains socket, display will show the "00:00 00 Scan Time" and synchronize to the current local time if you can receive a DAB signal in your location. After approximate one minute, it will switch to **STANDBY** mode.
- Press **⏻** on the unit or press **ON/STANDBY** on the remote control to switch the unit to ON mode.
- Press **⏻** to switch the unit back to **STANDBY** mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.

⚡ When the unit is idle for approximately 15 minutes, it will automatically switch to standby. Please turn the unit off completely to save energy when not in use.

selecting modes

Press **MODE** repeatedly on the unit or press CD, USB, TUNER/DAB, AUDIO IN, BLUETOOTH on the remote to switch between DAB, FM, CD, USB, AUX and Bluetooth modes.

adjusting the volume

- Turn the **VOLUME +/-** dial on the unit or press **VOLUME +/-** on the remote control to adjust the volume.
- If you wish to turn the sound off, press **⏻** on the remote control. Press **⏻** again or press **VOLUME +/-** on the remote control or turn **VOLUME +/-** to resume normal listening.

Getting to know your All-in-one Micro System

You'll be up and running in no time

auto setting the clock

The clock can be updated automatically if you can receive a DAB signal in your location. In order to synchronise to the current local time you must leave it on the DAB station for a short period of time.

manually setting the time

- During Standby mode, press the **CLOCK** on the remote control. The hour digits flash on the display.
- Press **◀▶** to adjust the hour digits, and then press **CLOCK** to confirm. The minute digits will flash on the display.
- Press **◀▶** to adjust the minute digits, and then press **CLOCK** to confirm.
- The time is now set.

★ If you cannot receive any DAB signal, you can manually set the time. Once DAB signal is received, the time will be automatically updated.

setting the daily timer

- Press and hold **TIMER** on the remote control until the display shows "On Timer", and the hour digits flash.
- Press **◀▶** to adjust the hour digits, and then press **TIMER** to confirm. The minute digits will flash on the display.
- Press **◀▶** to adjust the minute digits, and then press **TIMER** to confirm.
- When On Time Clock set, the display will show "Off Timer" and the hour digits will flash.
- Press **◀▶** to adjust the hour digits, and then press **TIMER** to confirm. The minute digits will flash on the display.
- Press **◀▶** on the remote control to adjust the minute digits, and then press **TIMER** to confirm.
- Finally Press **◀▶** to select **DAB, FM, DISC** or **USB** mode, then press **TIMER** to confirm. The display will show "VOL#" Press **◀▶** to adjust the volume, and then press **TIMER** to confirm.
- Press **TIMER** to select "Timer On", wait for a while "⊙" icon will show on the display to indicate the timer is on.
- The Timer setting is now complete.

On Timer
00:00

Off Timer
00:00

Source
DAB

VOLUME
VOL 15

Getting to know your All-in-one Micro System

You'll be up and running in no time

to cancel the daily timer

Press **TIMER** on the remote control repeatedly to select **TIMER Off** mode. The "⊙" indicator will disappear from the display.

setting the sleep timer

Use the sleep timer to turn the system off after a certain number of minutes in play mode. By setting the sleep timer, you can fall asleep to music and know that your system will turn off by itself rather than play all night.

- To set the sleep timer press **SLEEP** on the remote control repeatedly to view the different timer settings. The number of minutes shown will display in this sequence:

90 → 80 → 70 → 60 → 50 → 40 → 30 → 20 → 10 → OFF

- The system is now set to turn off after the number of minutes you have set. The display will show "SLEEP #", e.g. "SLEEP 10" means the unit will switch itself off after 10 minutes, "SLEEP 20" means the unit will switch itself off after 20 minutes, and so on.
- Press **SLEEP** to show the reminding time till the unit switches off minutes and return back to previous screen.
- To cancel the sleep timer press **SLEEP** repeatedly until "Sleep OFF" shows on the display.

 
system reset

There may be times when you need to reset your unit back to the factory settings especially when you have moved house. If you experience reception problems you may want to reset and try again. If you move to another part of the country and pick up the local and national DAB stations in that area, your previously tuned channels may no longer be available.

- During DAB mode, open the CD Disk tray then press and hold **ENTER/■STOP** on the unit until the display show "Restarting... FACTORY RESET".
- When successful reset, it will back to DAB mode.

★ After the system reset, all the tuned stations, FM/DAB preset stations will be erased.

Using your All-in-one Micro System 3

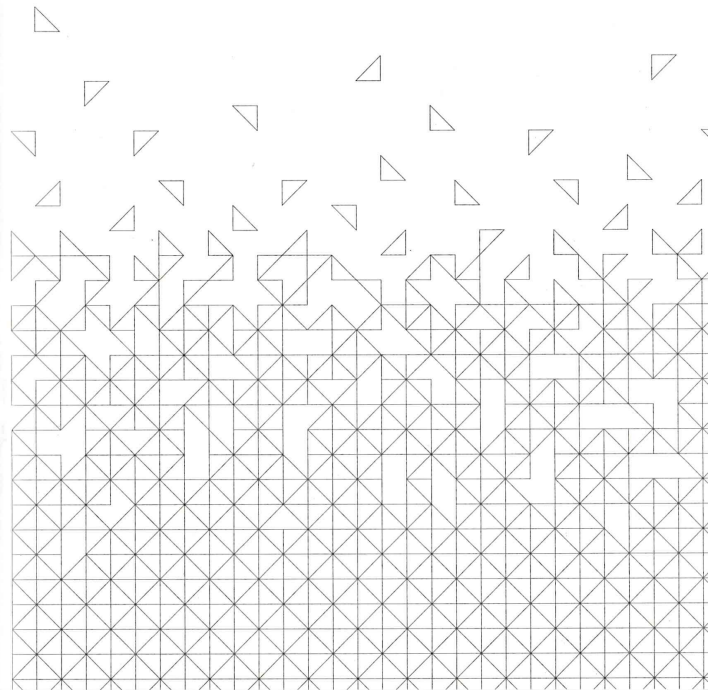

Using your All-in-one Micro System

Let's get started

 
DAB Operation

If the unit is connected to the mains power and then switched on from standby for the first time, the unit will automatically enter into the DAB mode and perform auto scan function. During the scan the display will show "Scanning..." together with a slide bar that indicates the progress of the scan and the amount of stations that have been found so far. Once the scan has finished, the unit will select the first alphanumerically found station. To explore the found stations, press **TUNING** \wedge \vee button.

full scan

The full scan will search for the entire DAB Band III channels. After the scan has finished, the first alphanumerically found station will be automatically selected.


1. To activate auto scan, press **MII** /SCAN and the display will show "Scanning..." and a progressing slide bar.
2. All the stations that have been found will be stored automatically. To explore and listen to the found stations, press **TUNING** \wedge \vee button to select. Then press **ENTER** confirm into stations.



manual tuning

As well as the auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

 1. Press **MENU** on the remote to display the menu.
2. Press **ENTER** to select Manual tune.
3. Press **TUNING** \wedge \vee to cycle through the DAB channels, which are numbered from 5A to 13F.
4. After your desired channel number is selected, press **ENTER** to confirm. The display will show the multiplex.
5. Press **MENU** again to add selected channel to station list.



secondary services

You may see a "s" symbol after the name of the station, this indicates that there are secondary services available to that station. These secondary services contain extra services that are related to the primary station: e.g. a sports station may want to add extra commentaries. The secondary services are inserted directly after the primary station in the station list. To select the secondary station, press **MENU** when the "s" appears in the display before the station name. When the secondary service ends, the unit will automatically switch back to the primary station.

preset stations (Remote control only)

You can store up to 30 of your favourite stations to the memory. This will enable you to access your favourite stations quickly and easily.

Using your All-in-one Micro System

Let's get started

1. To store a preset, you must first be listening to the station that you would like to save, press and hold **MEMORY**. The display will show "Preset Store <#: (Empty)>".
2. Press **PRESET** \wedge \vee to select your desired preset station number. Then press **ENTER** to confirm.
3. The station will be stored in few seconds and the screen will then show "Preset #Stored".

recalling a stored station (Remote control only)

1. Once you have saved a station to one of the preset buttons, you can recall it by pressing **MEMORY**.
2. Press **PRESET** \wedge \vee until your desired station show on the display; Then press **ENTER** to confirm into stations.



The stored stations will be saved into the memory and power off will not erase it. Storing a new station into a preset location will erase the previously stored station in that location.

DAB display modes

Press **DISPLAY** on the remote control, the display will switch through the following display modes:

Signal Strength — Programme Type — Ensemble Name — Channel number/frequency — Signal error — Audio Bit Rate — Time — Date

The information of each display mode is displayed on the lower segment of the display.

Signal Strength

This shows a slide bar to indicate the signal strength, the stronger the signal, the longer the bar will be from left to right.

Programme Type

This describes the "style" or "genre" of the programme that is being broadcast.

Ensemble Name

The Ensemble/Multiplex is a collection of radio stations that are bundled and transmitted together in a single frequency. There are national and local multiplexes, local ones contain stations that are specific to that area.

Channel number/frequency

This displays the Channel number/frequency of the present station, such as "11C 220.352MHz".

Signal error

Show the stability and quality of signal reception, the best representation for 0.

Using your All-in-one Micro System

Let's get started

Audio Bit Rate

The display will show the digital audio bit rate being received.

Time

This displays the current time provided automatically by the broadcaster.

Date

This displays the current date provided automatically by the broadcaster.

FM Operation

switching from DAB to FM mode

To switch the unit to **FM** mode, Press **MODE** repeatedly to select FM mode or press **TUNER/DAB** on the remote to switch to FM mode. The display will show the frequency.

auto scan

Press **SCAN/▶III** until the tuner starts searching for a station. To scan down the frequency band, press and hold **SCAN/▶III**. Once a station has been found, the scanning will stop automatically.

⚠ The search may not stop at a station with a very weak signal.

manual scan

To search for FM stations manually, press **TUNING ^ v** repeatedly until your desired frequency is reached.

⚠ With FM radio, it may necessary to fine tune each station by pressing **TUNING ^ v** repeatedly. Each press/tap will adjust the frequency by 0.05MHz. If reception is still poor adjust the position of the aerial or try moving the radio to another location.

audio mode

Press **MONO/STEREO** button to toggle between the Stereo or Mono selection.

⚠ The unit will automatically switch between stereo and mono mode, but you can override this and switch this function manually. This is helpful when receiving poor signal reception.

Using your All-in-one Micro System

Let's get started

preset stations

You can store up to 30 of your favourite stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save, press and hold **MEMORY**. The display will show "Preset Store <#> (Empty)>".
2. Press **PRESET ^ v** to select your desired preset station number. Then press **ENTER** to confirm. The station will be stored in few seconds and the screen will then show "Preset # Stored".

recalling a stored station

1. Once you have saved a station to one of the preset buttons, you can recall it by pressing **MEMORY**.
2. Press **PRESET ^ v** until your desired station show on the display; Then press **ENTER** to confirm.

⚠ The stored stations will be saved into the memory and power off will not erase it. Storing a new station into a preset location will erase the previously stored station in that location.

FM display modes

Press **DISPLAY** on the remote control, the display will switch through the following display modes:

Radio Text — Programme Type — Station Name — Audio Type — Time / Date

The information of each display mode is displayed on the lower segment of the display.

Radio Text

This is a scrolling message displaying information about the current programme.

Programme Type

This describes the "style" or "genre" of the programme that is being broadcast.

Station Name

This displays the station name.

Audio Type

This displays if the station being received is in mono or stereo.




Time/Date

This displays the current time / date.

Using your All-in-one Micro System

Let's get started

Compatible Disc Types

Disc Types	Disc Logo	Recorded Content
Recordable)		AUDIO
D-Rewritable)		AUDIO
D (Compact Disc Digital Audio)		AUDIO

CD/MP3 Operation

Press **MODE** repeatedly on the unit or press **CD** on the remote to select **CD** mode.

playback

1. Press **▲** open/close to open the disc tray.
2. Place the CD with the label side up into the CD compartment, and then press **▲** open/close to close the disc tray.
3. If there is no disc or the disc can't be read, **"NO DISC"** or **"Unknown Disc"** will show on the display.
4. The total number of tracks will display on the display, then press **SCAN/▶** to play the first track of the CD/MP3 disc automatically.
 - This unit can play CD, CD-R, CD-RW & 8cm disc.

to pause playback

1. Press **SCAN/▶** to pause the playback.
2. To resume playback, press **SCAN/▶** again.

to stop playback

ENTER/■ **STOP** to stop playback.

skipping to another track

Press **◀▶** to skip backwards to the beginning of the track or previous track or skip forwards to the next track.

Press and hold **◀▶** to perform fast forward/reverse playback.

Using your All-in-one Micro System

Let's get started

repeat playback

1. During stop or playback mode, press **REPEAT** once on the remote control, **"REP_ONE"** will show on the display. The CD will play the current track repeatedly.
2. Press **REPEAT** twice, **"REP_ALL"** will show on the display. The CD will play all tracks repeatedly.
3. Press **REPEAT** once more again, the **REPEAT** function will turn off.

REP_ONE	CD
T--01	00:07

REP_ALL	CD
T--01	00:07

random playback

All tracks on the disc can be played in a random order.

1. During playback mode, press **RANDOM** on the remote control. The **"RANDOM"** indicator will show on the display. All tracks will be played randomly.
2. Press **◀▶** to playback the next random track.
3. After all the tracks have played once, the playback will stop automatically.
4. To cancel random playback, press **RANDOM** during **RANDOM** playback. Normal playback will resume.

RANDOM	CD
T--13	00:00

programme setting (Remote control only)

User can program up to 32 tracks in CD mode or 64 tracks in MP3 in any desired order. Programme mode is activated while in **STOP** mode.

1. Press **MEMORY** to enter programme mode.
2. Press **◀▶** to select the track that you want to preset.
3. Press **MEMORY** to confirm the track.
4. Repeat steps 2-3 to programme more tracks. Once it is completed, press **SCAN/▶** to start playback of the programmed tracks.

MEMORY	P-01
	T-01

programme cancel

Press **■** **STOP** twice, or open the disk tray and close it again to erase the memory.

intro playback

During playback mode

 
- During playback mode, press **INTRO** on the remote control. The **"INTRO"** indicator will show on the display. The unit will play the first 10 seconds of each track.
- Press **INTRO** on the remote control again to resume normal playback.

Using your All-in-one Micro System

Let's get started

EQ Control

This system supports a variety of equalizers and sound effects. During playback, press **EQ** on the remote control to select a desired music mode. Each time **EQ** is pressed, the music mode will change to the next one as follows:



Bluetooth® Operation

The unit has a Bluetooth function that can receive a signal within 8 metres. Pairing the unit with a Bluetooth device to listen to music:

1. While in the **ON** mode, press **MODE** repeatedly on the unit or press **BLUETOOTH** on the remote to select Bluetooth mode.
2. If the unit is not paired with any Bluetooth device, the display will flash "**BT LINK**".
3. Activate your Bluetooth device and select the search mode.
4. The device "**BT SpeakerN**" will appear on your Bluetooth device list.
5. Select the device and enter "**0000**" for the password if necessary.
6. To disconnect the Bluetooth function, switch to another function on the unit or disable the function from your Bluetooth device.



- The operational range between the unit and the device is approximately 8 metres.
- If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- For better signal reception, remove any obstacles between the unit and the Bluetooth device.
- This unit supports A2DP (Advanced Audio Distribution Profile) and AVRCP (Audio Video Remote Control Profile) functions. This can only be paired with one Bluetooth device at one time.
- Compatibility with all devices and media types is not guaranteed.
- Some mobile phones with the Bluetooth function may connect and disconnect as you make and end calls. This is not an indication of a problem with your unit.

Using your All-in-one Micro System

Let's get started

USB Operation

1. When a USB device is connected to the unit, press **MODE** repeatedly on the unit or press **USB** on the remote to select USB mode.
2. The unit will automatically display the total number of tracks.
3. All playback features are the same as if you were playing an MP3 CD.



- The unit can only play MP3 and WMA file formats in USB operation.
- This unit supports USB version 1.1 and 2.0, with memory up to 32GB.
- If your USB device is inserted but the display keeps showing "NO", the USB device might not be compatible with the unit.
- If your USB device is loaded with MP3 or WMA file but it cannot playback, the file format might not be compatible with the unit.
- The unit may not be compatible with all USB devices or file format; this is not an indication of a problem with the unit.

- Press **REPEAT** once, "**REP_ONE**" will show on the display. It will play the current track repeatedly.
- Press **REPEAT** twice, "**REP_ALBUM**" will show on the display. It will play the current folder repeatedly.
- Press **REPEAT** three times, "**REP_ALL**" will show on the display. It will play all files repeatedly.
- Press **REPEAT** once more again, the repeat function will turn off.

AUX Operation

There is an "AUDIO IN" socket located at the front of the unit. Analogue audio sound signals from other sources can be input to the unit through this socket.

1. Connect the input to another audio device via an AUX cable (not included) with an "AUDIO IN" socket.
2. Press the **MODE** button repeatedly on the unit or press the **AUDIO IN** button on the remote to select **AUX** mode.
3. Turn the **VOLUME +/-** dial on the unit or press the **VOLUME +/-** buttons on the remote control to adjust the volume control for your desired sound output level.
4. In **AUX** mode, operate your audio device directly for playback features.



When connecting the external audio device, refer to the owner's manual of the external device, as well as the manual. Examples of External Audio Device that can be connected to the unit are: Portable MP3 Players, Cassette Players, Mini Disc Players, DVD Players, etc.

Using your All-in-one Micro System

Let's get started



 
4-hour playback:

1. If the unit is in AUX mode more than 4 hours, it will automatically switch to Standby mode.
2. 10 minutes before entering to Standby mode, "AUTO-OFF" will flash on the display.
3. Press **INTRO** to continue and cancel auto off function.

Maintenance

Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.



Cleaning Discs

- Fingerprints and dust on the disc cause sound deterioration. Wipe the disc from the centre outwards with a cloth. Always keep the disc clean.
- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened cloth and nish with a dry cloth.
- Do not use any type of solvent such as thinner, benzine, commercially available cleaners or antistatic spray. They may damage the disc.



Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Other information 4


Other information

Helpful technical information

Specifications

Power Supply	AC 100-240V ~50/60Hz
Output Power	5W x 2
USB Power	5V \Rightarrow 1000mA
Frequency Range	DAB 174-239 MHz FM 87.5 - 108 MHz
Compact Disc	Frequency Response: 20 Hz - 20 kHz
Unit Dimension	350 mm (W) x 210 mm (D) x 120 mm (H)
Unit Net Weight	~ 2.6 kg

 Product support 5

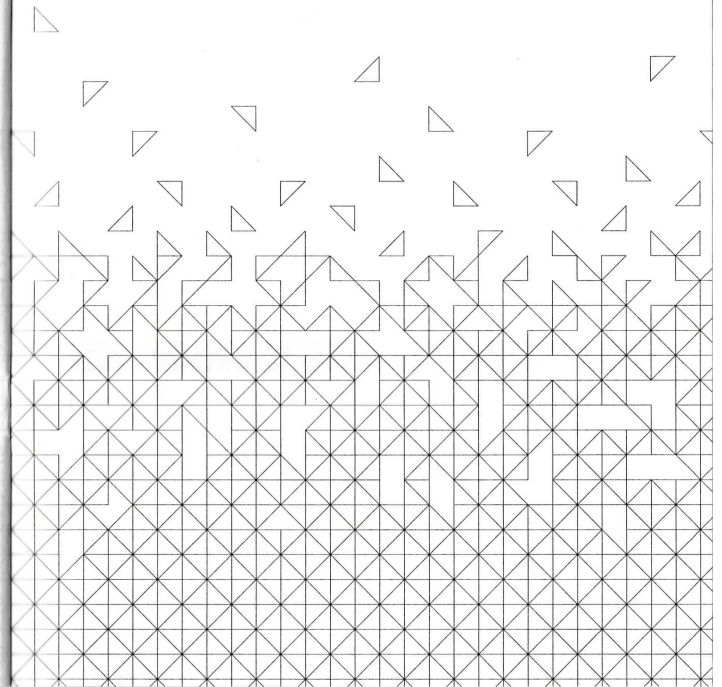

Product support

Help is always at hand

Troubleshooting

General

Problem	Solution
No power.	<ul style="list-style-type: none">• Ensure the mains plug is connected.• Make sure that you select the ON mode.
The remote control is not functioning.	<ul style="list-style-type: none">• Use the remote control near the unit.• Point the remote control at the remote sensor on the unit.• Replace the battery in the remote control with a new one.• Remove any obstacles between the remote control and the unit.
No sound from the unit.	<p>Try one of the solutions below.</p> <ul style="list-style-type: none">• Make sure that the unit is not muted. Press the or the VOL + / - on the remote control, or turn the - VOLUME + dial on the unit to resume normal listening.• Press on the unit or on the remote control to switch the unit to standby mode. Then press the button again to switch the unit on.• Unplug the unit from the mains socket, then plug in again. Switch on the unit.
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none">• The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.

CD

Problem	Solution
Disc in place but the unit won't play.	<ul style="list-style-type: none">• Make sure you've selected CD mode.• Make sure the disc label is facing up.• Make sure the disc is clean.• PAUSE mode may be activated, deactivate it.• Disc may be damaged or dirty, check and clean the disc.
Disc skips	<ul style="list-style-type: none">• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.

Product support

Help is always at hand

Radio

Problem	Solution
Poor radio reception.	<ul style="list-style-type: none">• Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Desired station not found.	<p>FM</p> <ul style="list-style-type: none">• Weak signal. Search manually.• If reception is still poor, adjust the position of the aerial. <p>DAB</p> <ul style="list-style-type: none">• No DAB coverage in your area or poor reception. Adjust the position of the aerial.• Perform a system reset and then a DAB full scan.

Bluetooth®

Problem	Solution
I cannot find "BT SpeakerN" on my Bluetooth® device.	<ul style="list-style-type: none">• Ensure the Bluetooth® function is activated on your Bluetooth® device.• Ensure you have paired your unit with the Bluetooth® device.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your All-in-one Micro System is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 257 7271**. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies*

Line open 8am-7pm Monday to Saturday and 10am-4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.



This appliance complies with the following EEC directives:
2006/95/EEC Low voltage directive
2004/108/EMC directive

Product support

Help is always at hand

Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations.

Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

All trademarks are the property of their respective owners and all rights are acknowledged.